



LESTER B. PEARSON
Pearson Electrotechnology Centre


LAB 5

Aerial Drop

Module 20

Connection to the Telephone Network

790495

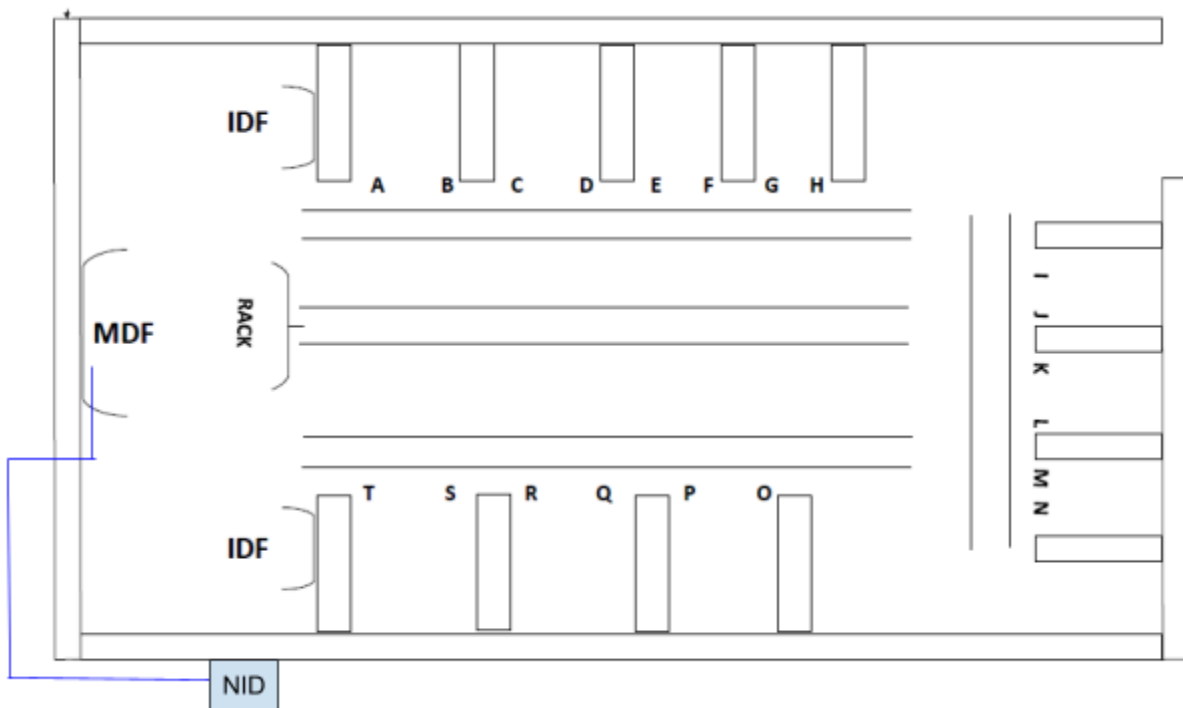

Part 1

Run a cable from MDF to the outside NID. The Identification must be

M=Mast (Electrical power conduit on the side of the building) M1 to M5

N=NID (Network Interface Device) N1 or N2

L = Line L1 or L2


Part 2

Install the aerial drop cable from the SLIC (Subscriber Line Closure) to your NID

SLIC 1 = Pairs 1 - 4 - 5 - 6 - 7 - 8 - 9 - 19;

SLIC 2 = Pairs 2 - 3 - 12 - 13 - 16 - 17 - 18 - 20;

SLIC 3 = Pairs 11 - 14 - 15 - 19 - 21 - 22 - 23 - 24 - 25.

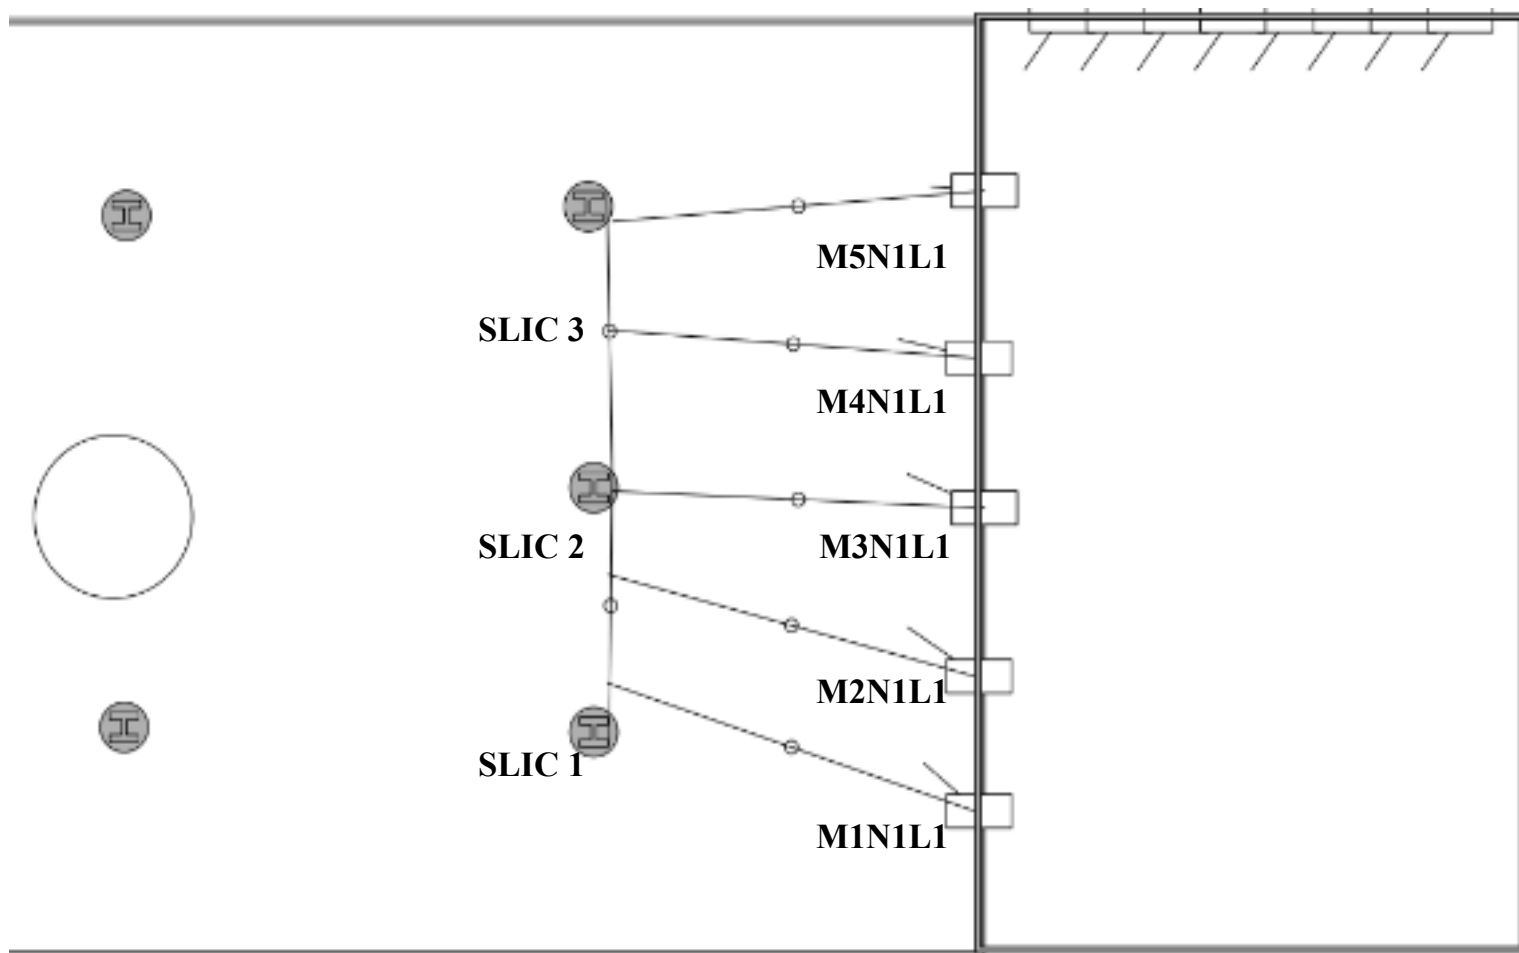

Part 3 - Redo the cross-connection