



LESTER B. PEARSON
Pearson Electrotechnology Centre

LAB 1

Installation

Module 20

Connection to the Telephone Network

790495

Part 1

Remove the actual drywall and install a new one in your space.


Do the opening for the electrical box

Do the opening for a bracket.

Part 2

Install 2 cables from your cubicle to the IDF

Leave a slack of cable.

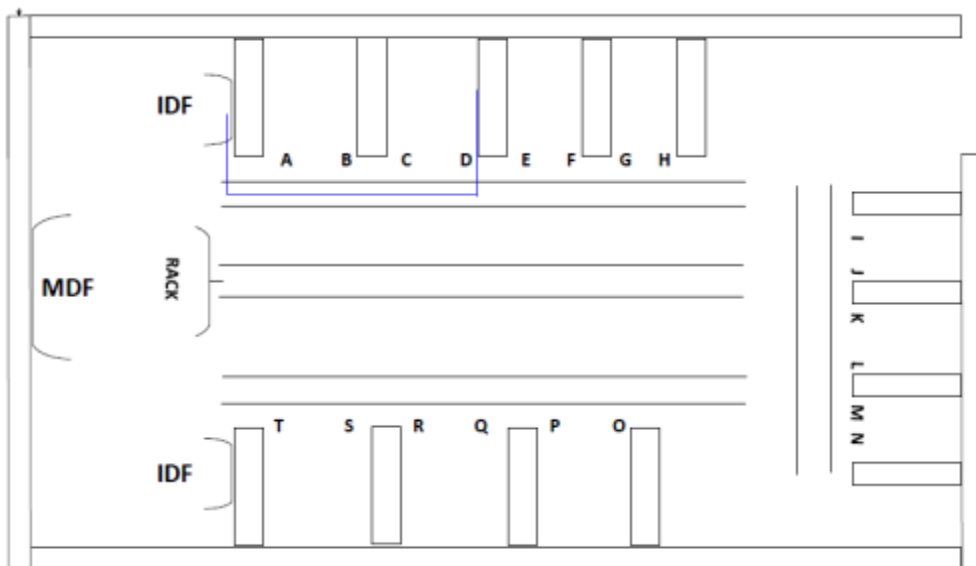

Connect only the GREEN and RED

Part 3

Install 1 cat 3 cable for the RJ-11 jack

